


## 4-Weg Schalter für Telecaster

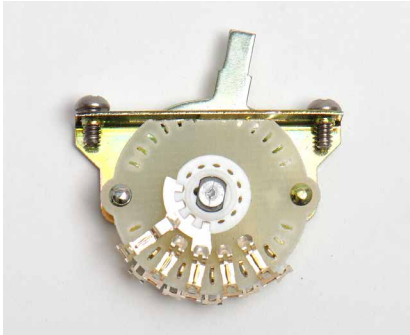


„Lever Switch“ passend für Fender Telecaster und ähnliche Gitarren. Die vierte Position ermöglicht zusätzliche Schaltvarianten.



### Beispielschaltung:

Telecaster mit zusätzlicher Reihenschaltung in der 4. Schalterposition.

Beim Halspickup muss die Masseverbindung zwischen Pickupkappe und Pickup getrennt werden. Stattdessen muss ein separates Massekabel an die Kappe gelötet werden, um die Abschirmwirkung zu erhalten.

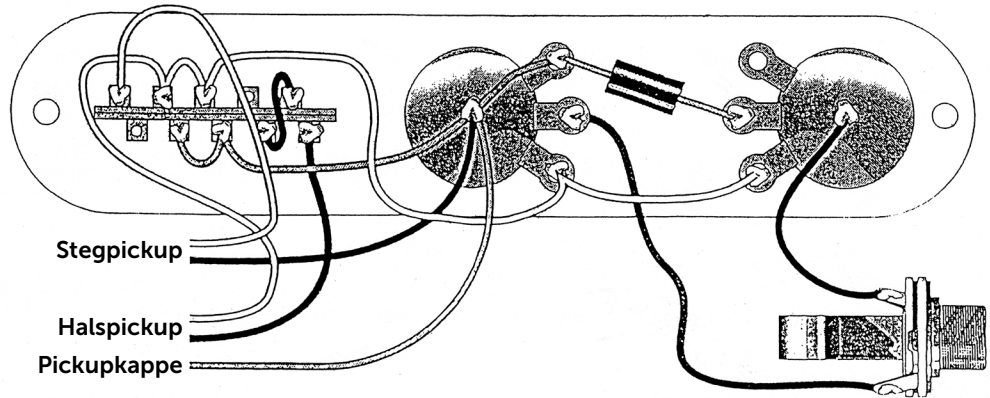


- Pos.1:** Stegpickup
- Pos.2:** Steg- & Halspickup parallel
- Pos.3:** Halspickup
- Pos.4:** Steg- & Halspickup in Serie

Schalterposition 4 ergibt einen fetteren Sound mit mehr Output als die übrigen Positionen. Der Nachbrenner für das Solo zwischendurch!

US004

## 4-Way Switch for Telecaster

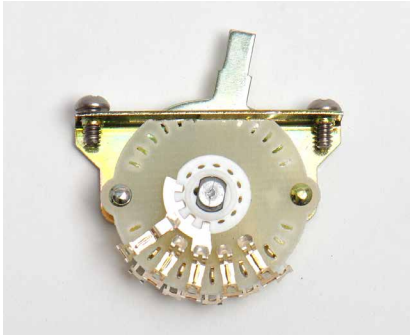


Lever switch suitable for Fender Telecaster and similar guitars. The 4th position allows additional switching options.



### Example circuit:

Telecaster with additional series mode in the 4th switch position.

The neck pickup needs a separate ground wire soldered to the metal pickup cap to maintain the shielding effect while the pickups are wired in series.

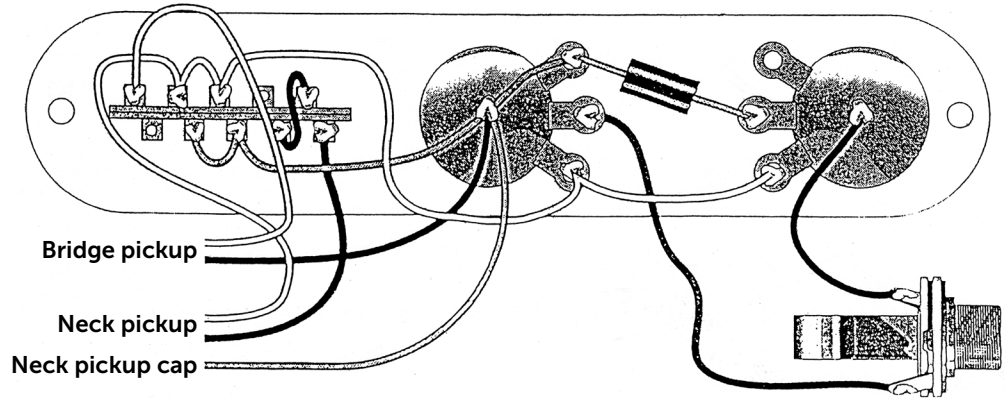

- Pos.1:** Bridge pickup
- Pos.2:** Bridge & neck pickup in parallel
- Pos.3:** Neck pickup
- Pos.4:** Bridge & neck pickup in series

Switch position 4 produces a richer sound with more output than the other positions. The afterburner for the solo in between!